


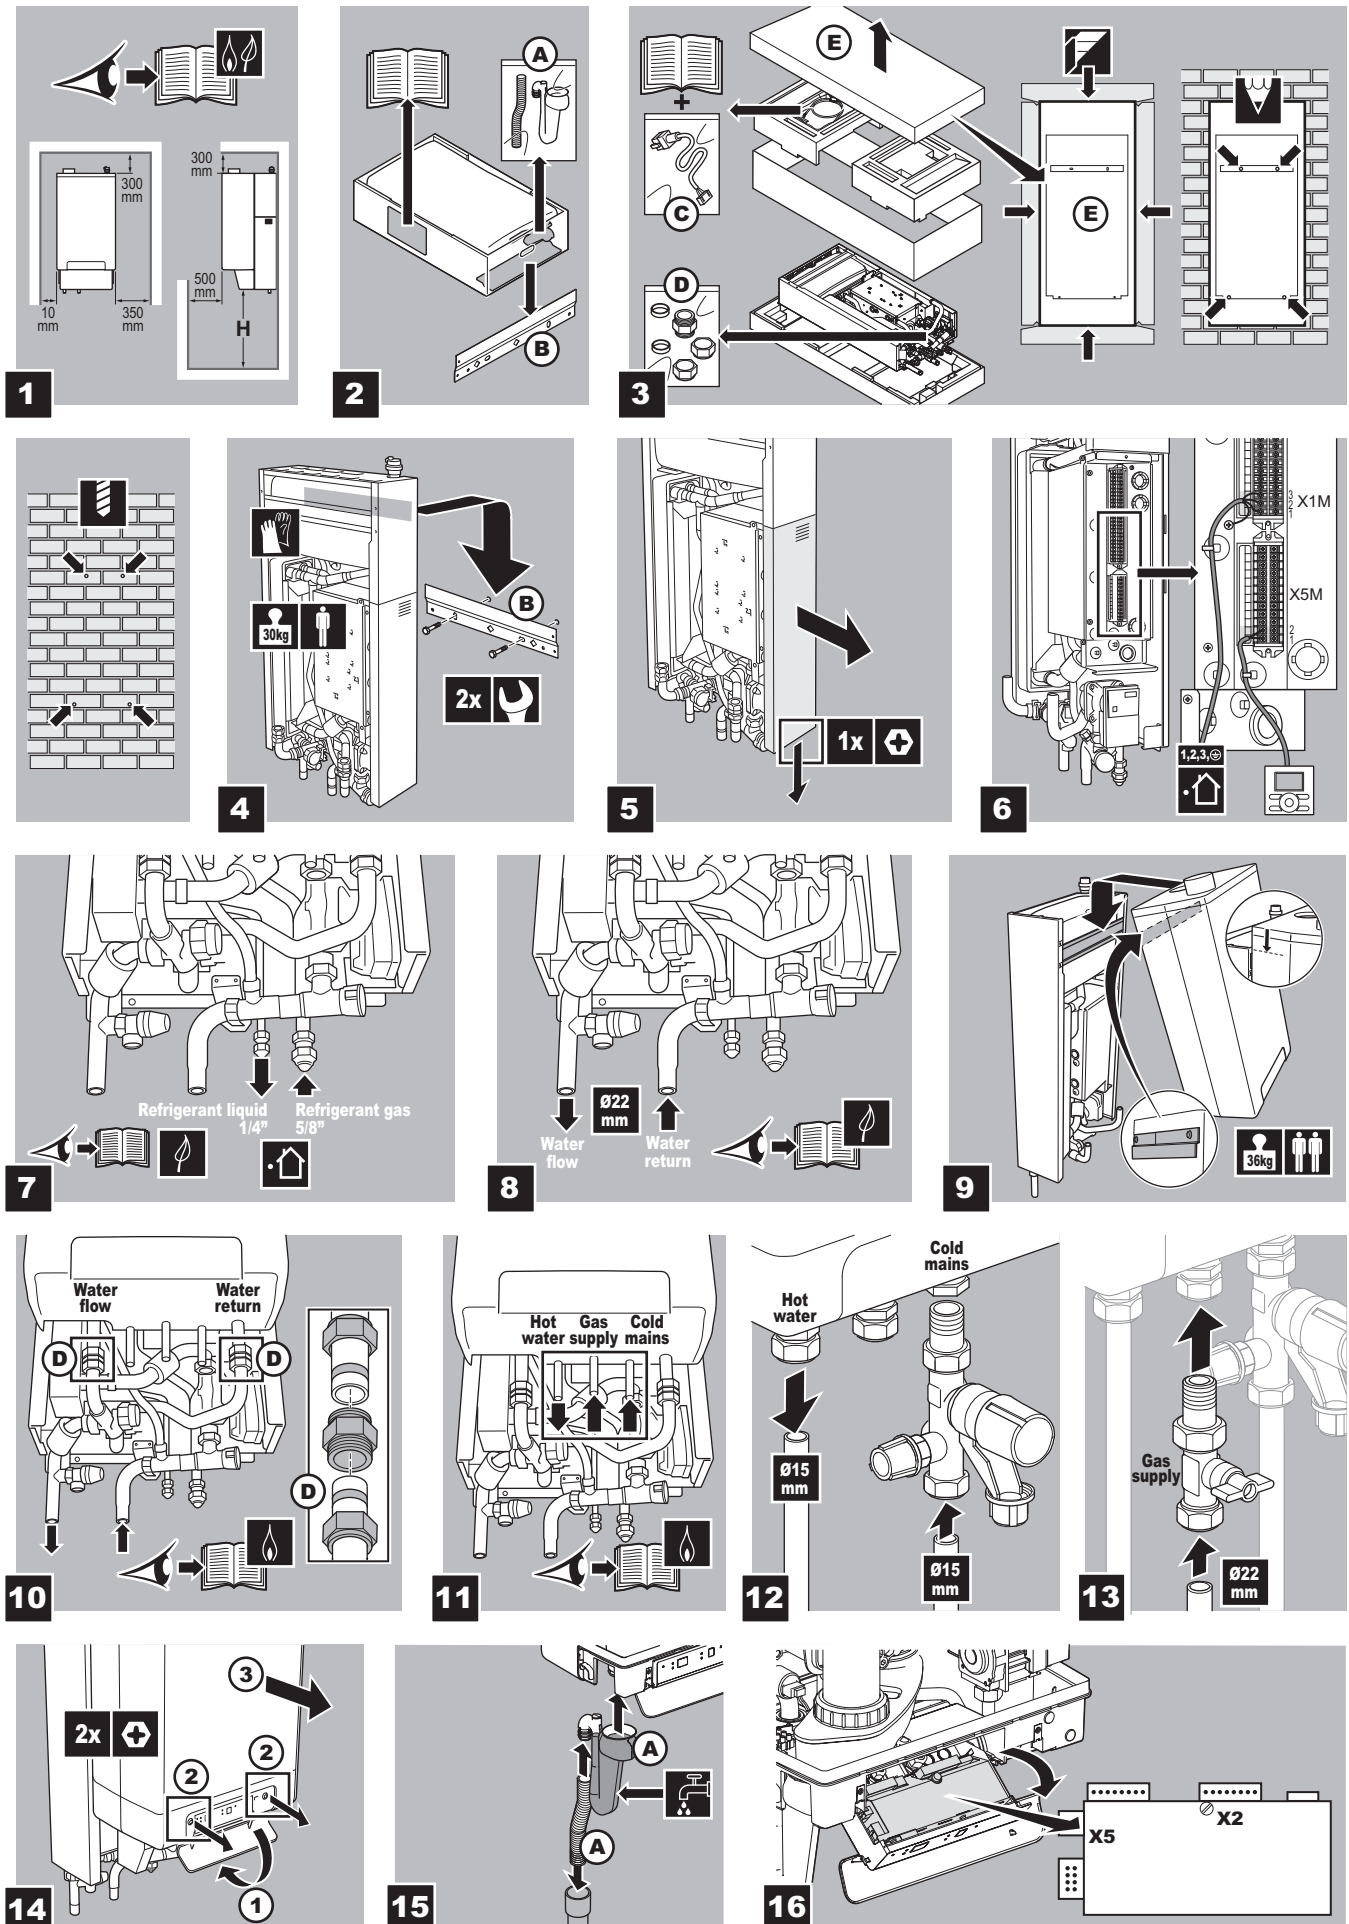
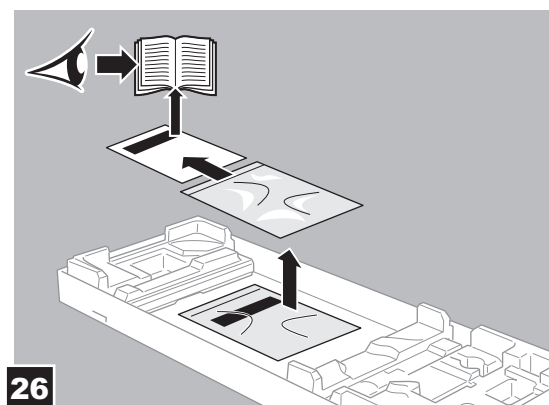
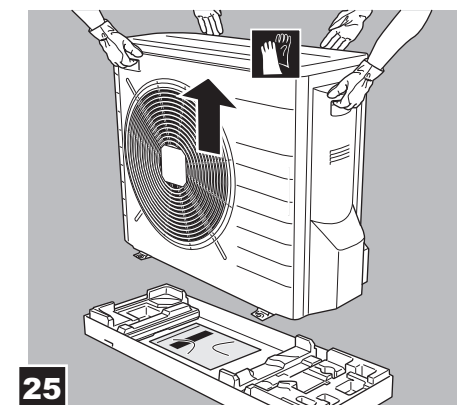
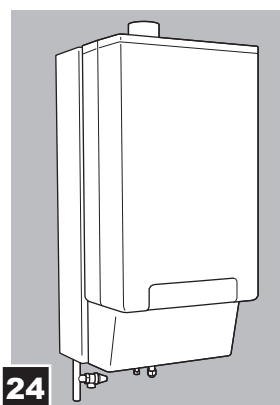
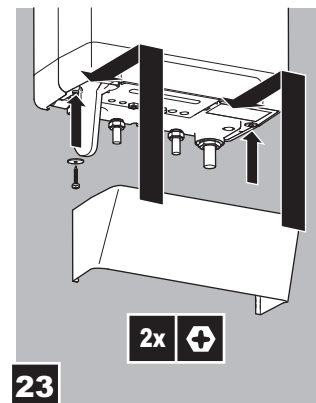
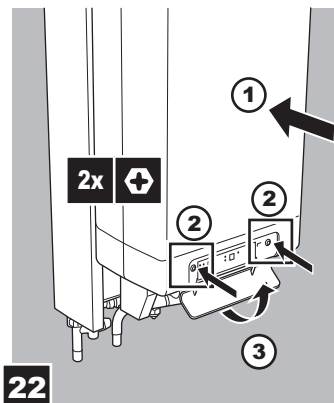
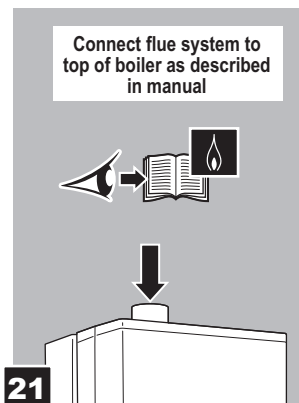
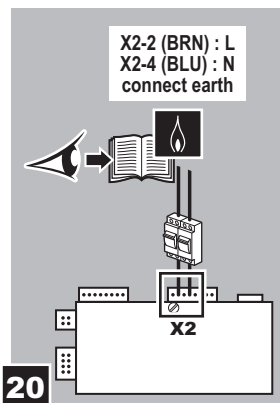


Installation in a nutshell

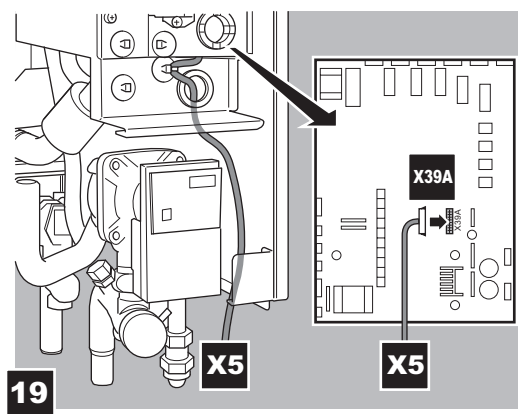

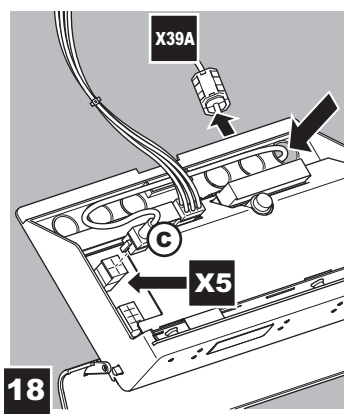

Set boiler parameter $\bar{E}$.
$\bar{E}. = 0$

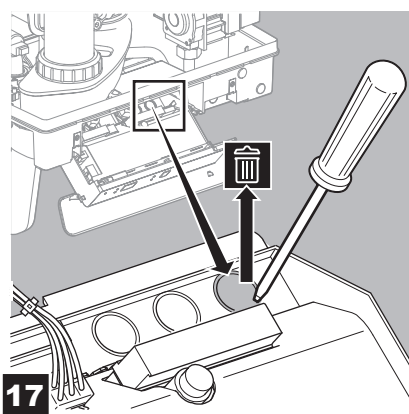

In case of UA-52 error	
Cause	Possible solution
Boiler parameter $\bar{E}$. is not set correctly	Set boiler parameter $\bar{E}$. correctly
Software incompatibility between boiler and heat pump	Reprogram the boiler

